 


# Between Series Adapter – High Frequency

## Between-Series Adapter

 


### BNC - F Adapter

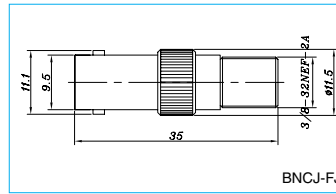


Part Number	BNC	F
BNCP-FP	Plug	Plug
BNCP-FJ	Plug	Jack
BNCJ-FP	Jack	Plug
BNCJ-FJ	Jack	Jack

### BNC - M Adapter

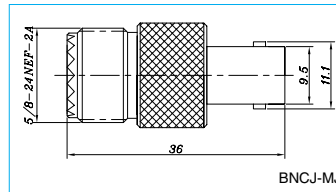


Part Number	BNC	M
BNCP-MP	Plug	Plug
BNCP-MJ	Plug	Jack
BNCJ-MP	Jack	Plug
BNCJ-MJ	Jack	Jack

### BNC - RCA Adapter

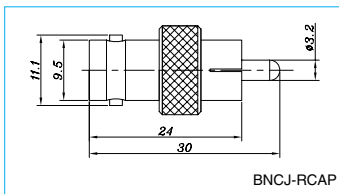 


Part Number	BNC	RCA
BNCP-RCAP	Plug	Plug
BNCP-RCAJ	Plug	Jack
BNCJ-RCAP	Jack	Plug
BNCJ-RCAJ	Jack	Jack

### BNC - SMA Adapter

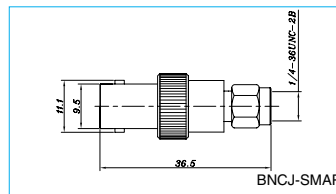 


Part Number	BNC	SMA
BNCP-SMAP	Plug	Plug
BNCP-SMAJ	Plug	Jack
BNCJ-SMAP	Jack	Plug
BNCJ-SMAJ	Jack	Jack

### BNC - TNC Adapter

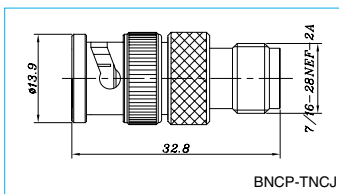 


Part Number	BNC	TNC
BNCP-TNCP	Plug	Plug
BNCP-TNCJ	Plug	Jack
BNCJ-TNCP	Jack	Plug
BNCJ-TNCJ	Jack	Jack

### F - RCA Adapter

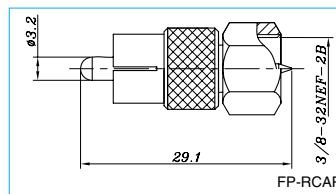 


Part Number	F	RCA
FP-RCAP	Plug	Plug
FP-RCAJ	Plug	Jack
FJ-RCAP	Jack	Plug
FJ-RCAJ	Jack	Jack

### M - RCA Adapter

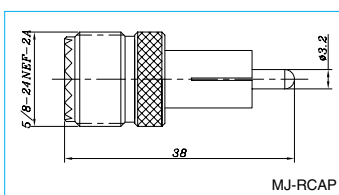 


Part Number	M	RCA
MP-RCAP	Plug	Plug
MP-RCAJ	Plug	Jack
MJ-RCAP	Jack	Plug
MJ-RCAJ	Jack	Jack

### M - SMA Adapter

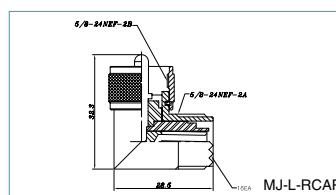 


Part Number	M	RCA
MJ-L-RCAP	Jack	Plug

### N - M Adapter

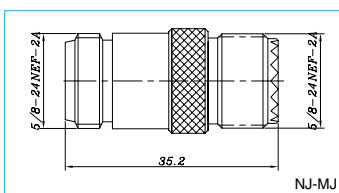 


Part Number	N	M
NP-MP	Plug	Plug
NP-MJ	Plug	Jack
NJ-MP	Jack	Plug
NJ-MJ	Jack	Jack

### N - SMA Adapter

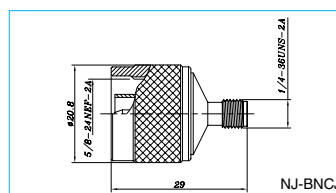 


Part Number	N	SMA
NP-SMAP	Plug	Plug
NP-SMAJ	Plug	Jack
NJ-SMAP	Jack	Plug
NJ-SMAJ	Jack	Jack

### N - TNC Adapter

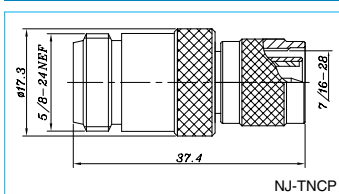 

Part Number	N	TNC
NP-TNCP	Plug	Plug
NP-TNCJ	Plug	Jack
NJ-TNCP	Jack	Plug
NJ-TNCJ	Jack	Jack

### N - BNC Adapter

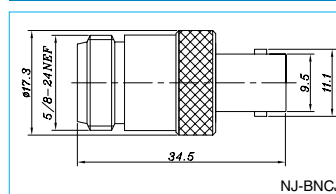 

Part Number	N	BNC
NP-BNCP	Plug	Plug
NP-BNCJ	Plug	Jack
NJ-BNCP	Jack	Plug
NJ-BNCJ	Jack	Jack

Specifications subject to change without notice. Consult Sam Woo Electronics for the latest specifications.